

Noise Sensor

IOT-S300NOIS

Product Manual

(V1.3)



● Important statement

Thank you very much for choosing our products, we will serve you sincerely forever. The company pursues excellent quality and pays more attention to excellent after-sales service.

Operation errors will shorten the life of the product, reduce its performance, and may cause accidents in severe cases. Please hand over this manual to the end user and read it carefully before using the product. And please keep it in a safe place for reference when needed. The company reserves the right to modify this manual due to product technology and process updates. If there is any change, no further notice will be given, and the final interpretation of this manual is reserved.

● Product overview

The noise measurement module is installed in a standard installation housing. The device uses (4~20)mA, (0~5)V, (0~10)V, RS485 signal (standard MODBUS-RTU communication protocol) output. This transmitter is widely used in occasions where environmental noise needs to be measured.

● Features


- ◇ (10-30) V wide DC voltage power supply.
- ◇ (4~20) mA, (0~5) V, (0~10) V, standard MODBUS-RTU communication protocol.
- ◇ High sensitivity, low power consumption.
- ◇ Temperature compensated, excellent linear output.

● Technical indicators


Measuring range	Range: 30~120 dB; Frequency: 20Hz~12.5KHz
Precision	High precision: ± 0.5 dB Normal accuracy: 2%FS ± 0.5 dB (reference tone standard: 94 dB@1KHz)
Supply voltage	10~30VDC (4-20mA/0-5V/RS485) , 24VDC (0~10V)
Output signal	4~20mA, 0~5V, 0~10V, TTL (Modbus RTU communication protocol), RS485 (Modbus RTU communication protocol)
Maximum power consumption	Analog signal: 1.2W; Digital signal: 0.4W
Operating temperature	-20~60℃ 0~80%RH
Storage temperature	-20~80℃

Note: If there are any differences between the technical specifications and cable definitions in the manual and the actual product, please refer to the actual order.

• Dimensions

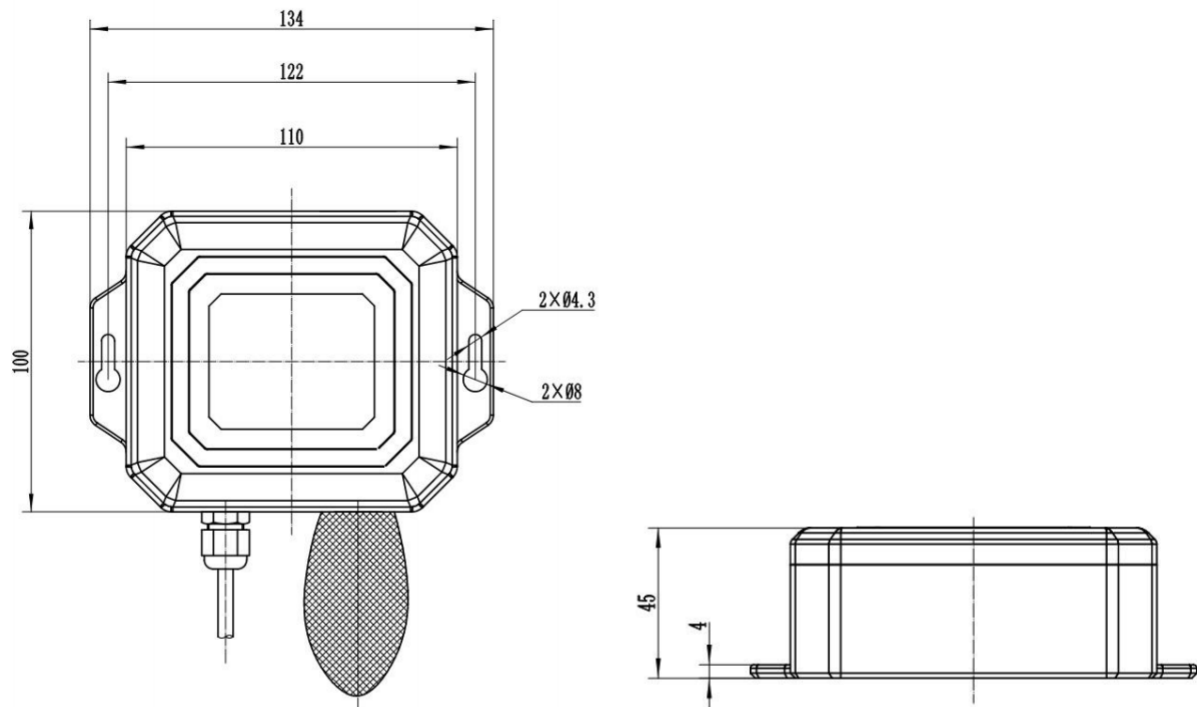

• Electrical interface and wiring method

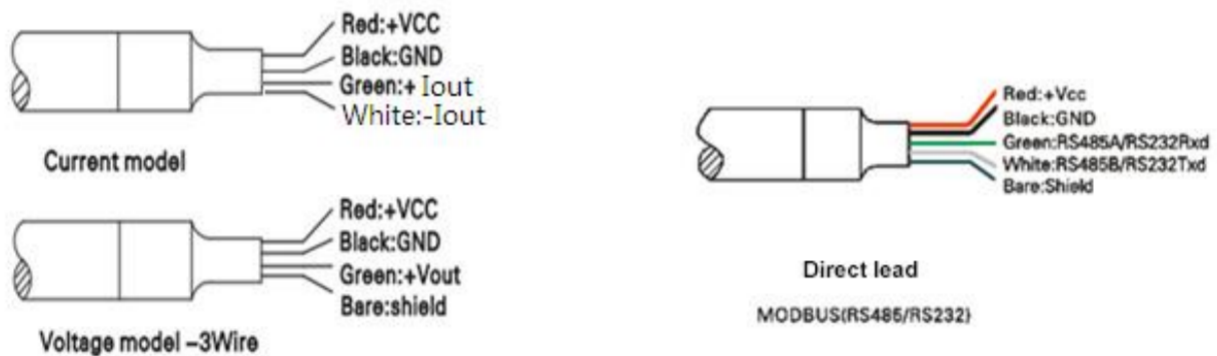

• Precautions

1. After opening the product package, please check whether the appearance of the product is intact, check whether the relevant content of the product instruction manual is consistent with the product, and keep the product instruction manual for more than one year;
2. Wiring strictly according to the wiring diagram of the product, and work under the permissible excitation voltage of the product, and do not use it with overvoltage;
3. Do not knock the product, so as not to damage the appearance and internal structure of the ring;
4. The product has no customer-repairable parts, please contact our company in case of failure;
5. If the company's products fail under normal conditions, the warranty period is one year (13 months from the date of delivery by our company to the date of return). as the basis. For maintenance

beyond the time limit, the company will charge a basic fee, and all products of the company will be maintained for life;

6. Please refer to our company website or call us for details.

(RS485) MODBUS Communication Protocol

● Basic settings of communication protocol

Transmission mode: MODBUS-RTU mode.

Communication parameters: default baud rate 9600bps (optional 2400bps, 4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps, can be configured according to user requirements), 1 start bit, 8 data bits, no parity (optional odd parity, even parity), 1 stop bit, after changing the communication parameters, it is recommended to power on the sensor again.

Slave address: The factory default is 1, which can be configured according to user requirements.

● Holding register list

Parameter	MODBUS holding register address (16 bits)
Noise value	Address: 0000H, the read value divided by 10 is the noise measurement value, for example, the read value is 0x0258, converted to decimal is 600, then the noise measurement value is 60.0dB.
Baud rate	Address: 0014H The setting value is 24, 48, 96, 192, 384, 576, 1152, corresponding to the baud rate respectively, 2400, 4800, 9600, 19200, 38400, 57600, 115200, for example, the default baud rate is 9600, the setting value is 0x0060
Check Digit	Address: 0015H 0x0000 means no parity, 0x0001 means odd parity, 0x0002 means even parity
Slave address	Address: 0017H Default: 0x0001

Note: Access to other addresses is prohibited.

● Modbus RTU command

Supported MODBUS function codes: 0x03, 0x06

03H function code example: read the noise measurement data of the sensor whose slave address is No. 1.

★Host query command:

Slave Address	01H	Slave address
Function	03H	Function code

Starting Address Hi	00H	The high 8 bits of the start register address
Starting Address Lo	00H	The lower 8 bits of the start register address
No. of Registers Hi	00H	The upper 8 bits of the number of registers
No. of Registers Lo	01H	The lower 8 bits of the number of registers
CRC Check Lo	84H	CRC check code lower 8 bits
CRC Check Hi	0AH	CRC check code high 8 bits

★Slave response:

Slave Address	01H	Slave address
Function	03H	Function code
Byte Count	02H	4 bytes long
Data Hi	02H	The noise is: 0x0258, which is 60.0dB
Data Lo	58H	
CRC Check Lo	B8H	CRC check code lower 8 bits
CRC Check Hi	DEH	CRC check code high 8 bits

06H function code example: modify the baud rate (in this case, modify it to 57600bps)

★Host query command:

Slave Address	01H	Slave address
Function	06H	Function code
Starting Address Hi	00H	The baud rate holding register address is 0014H
Starting Address Lo	14H	The baud rate holding register address is 0014H
Data Hi	02H	When the baud rate is 57600bps, the value of the register is 576, which is 0x0240
Data Lo	40H	When the baud rate is 57600bps, the value of the register is 576, which is 0x0240
CRC Check Lo	C9H	CRC check code lower 8 bits
CRC Check Hi	5EH	CRC check code high 8 bits

★Slave response:

Slave Address	01H	Slave address
Function	06H	Function code
Starting Address Hi	00H	The baud rate holding register address is 0014H
Starting Address Lo	14H	The baud rate holding register address is 0014H
Data Hi	02H	When the baud rate is 57600bps, the value of the register is 576, which is 0x0240
Data Lo	40H	When the baud rate is 57600bps, the value of the register is 576, which is 0x0240
CRC Check Lo	C9H	CRC check code lower 8 bits
CRC Check Hi	5EH	CRC check code high 8 bits

(TTL) MODBUS communication protocol

● Basic settings of communication protocol

Transmission mode: MODBUS-RTU mode.

Communication parameters: default baud rate 9600bps (optional 2400bps, 4800bps, 9600bps, 19200bps, 38400bps, 115200bps, can be configured according to user requirements), 1 start bit, 8 data bits, no parity (optional odd parity , even parity), 1 stop bit, after changing the communication parameters, it is recommended to power on the sensor again.

Slave address: The factory default is 1, which can be configured according to user requirements.

● Holding register list

Parameter	MODBUS holding register address (16 bits)
Noise value	Address: 0000H, the read value divided by 10 is the noise measurement value, for example, the read value is 0x0258, converted to decimal is 600, then the noise measurement value is 60.0dB.
Baud rate	Address: 0067H Baud rate coding: 1 is 2400; 2 is 4800; 3 is 9600; 4 is 19200; 5 is 38400; 6 is 115200.
Slave address	Address: 0066H Default: 0x0001

Note: Access to other addresses is prohibited.

● Modbus RTU command

Supported MODBUS function codes: 0x03, 0x06

03H function code example: read the noise measurement data of the sensor whose slave address is No. 1.

★Host query command:

Slave Address	01H	Slave address
Function	03H	Function code
Starting Address Hi	00H	The high 8 bits of the start register address
Starting Address Lo	00H	The lower 8 bits of the start register address
No. of Registers Hi	00H	The upper 8 bits of the number of registers
No. of Registers Lo	01H	The lower 8 bits of the number of registers
CRC Check Lo	84H	CRC check code lower 8 bits
CRC Check Hi	0AH	CRC check code high 8 bits

★Slave response:

Slave Address	01H	Slave Response: Slave Address
Function	03H	Function code
Byte Count	02H	4 bytes long
Data Hi	02H	The noise is: 0x0258, which is 60.0dB
Data Lo	58H	
CRC Check Lo	B8H	CRC check code lower 8 bits
CRC Check Hi	DEH	CRC check code high 8 bits

06H function code example: modify the baud rate (in this case, modify it to 38400bps)

★Host configuration command:

Slave Address	01H	Slave address
Function	06H	Function code
Starting Address Hi	00H	The baud rate holding register address is 0014H
Starting Address Lo	67H	The baud rate holding register address is 0067H
Data Hi	00H	When the baud rate is 38400bps, the value of the register is 5, which is 0x05
Data Lo	05H	When the baud rate is 38400bps, the value of the register is 5, which is 0x05
CRC Check Lo	F8H	CRC check code lower 8 bits
CRC Check Hi	16H	CRC check code high 8 bits